


Identification and Overview

Low Range ZPM - Zone Pressure Sensor in a Box Enclosure

The ZPM is designed for quick and easy field installation. The outputs, ranges, units, directionality, and response time are all easily set in the field without powering the unit.

The optional LCD display helps with troubleshooting because it displays the actual pressure regardless of the selected pressure range. Three LEDs on the face of the unit indicate when the pressure is “Out of Range Low”, “In Range” or “Out of Range High” for the selected range. The appropriate LED will flash when out of range.

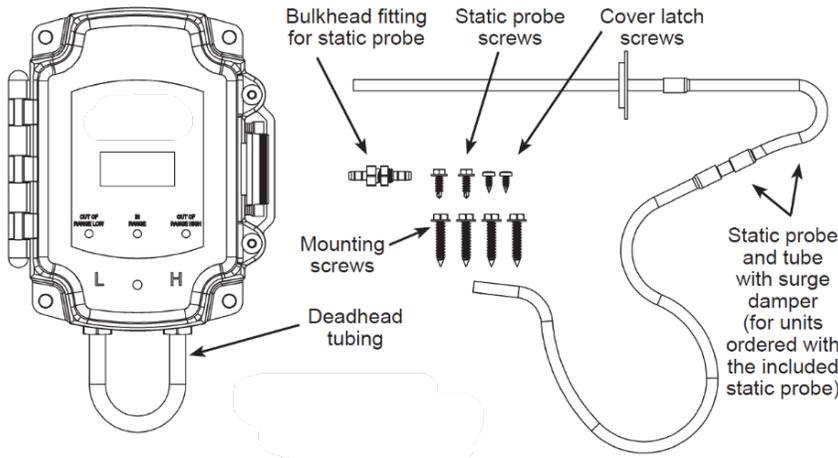

Part #: N1-ZPM-LR-ST-D-BB-A

Specifications

Power:

- 7 to 40 VDC (4 to 20 mA Output)
- 7 to 40 VDC or 18 to 32 VAC (0 to 5 or 1 to 5 VDC Output)
- 13 to 40 VDC or 18 to 32 VAC (0 to 10 or 2 to 10 VDC Output)

Power Consumption:

- 20 mA max, DC only at 4 to 20 mA Output
- 5.2 mA max DC at 0 to 5 or 0 to 10 VDC Output
- 0.12 VA max AC at 0 to 5 or 0 to 10 VDC Output

Load Resistance:

- 4 to 20 mA Output 850Ω Maximum @ 24 VDC 0 to 5 or 0 to 10 VDC Output 6KΩ Minimum

System Accuracy:

- ±0.25% FS at 72°F (22°C) for All Units Low Range: Proof 270” WC (67 kPa)

- Stability:** ±0.25% FS per year Overpressure: Proof 270” WC (67 kPa) Media: Clean, dry, non-corrosive gases

- Compensated Temperature Range:** 32 to 122°F (0 to 50°C)

- Environmental Operating Range:** -4 to 140°F (-20 to 60°C)

- Storage Temperature:** -40 to 185°F (-40 to 85°C)

- Humidity:** 0 to 95% RH, non-condensing

Wiring:

- 2 wires (4 to 20mA Current loop)
- 3 wires (AC or DC powered, VDC output)

Port Size: 1/4” barb

Enclosure Material:

- UV-resistant Polycarbonate, UL94, V-0
- Enclosure Rating: IP66, NEMA 4

Agency:

- CE EN 61326-1:2013 EMC (Industrial Electromagnetic Environment), UL, RoHS

Selectable Low Ranges

<u>Inches WC</u>	<u>Pascals</u>
0 to 0.10.....	0 to 30
0 to 0.25.....	0 to 50
0 to 0.50.....	0 to 100
0 to 0.75.....	0 to 175
0 to 1.00.....	0 to 250
-0.10 to 0.10	-30 to 30
-0.25 to 0.25	-50 to 50
-0.50 to 0.50	-100 to 100
-0.75 to 0.75	-175 to 175
-1.00 to 1.00	-250 to 250


Field Selectable Ranges and Outputs

STANDARD RANGE UNITS		LOW RANGE UNITS		HIGH RANGE UNITS	
<u>Inches WC</u>	<u>Pascals</u>	<u>Inches WC</u>	<u>Pascals</u>	<u>Inches WC</u>	<u>Pascals</u>
0 to 1.00.....	0 to 250	0 to 0.10.....	0 to 30	0 to 5.....	0 to 1,250
0 to 2.00.....	0 to 300	0 to 0.25.....	0 to 50	0 to 10.....	0 to 2,500
0 to 2.50.....	0 to 500	0 to 0.50.....	0 to 100	0 to 15.....	0 to 4,000
0 to 3.00.....	0 to 1,000	0 to 0.75.....	0 to 175	0 to 25.....	0 to 6,000
0 to 5.00.....	0 to 1,250	0 to 1.00.....	0 to 250	0 to 30.....	0 to 7,400
-1.00 to 1.00	-250 to 250	-0.10 to 0.10	-30 to 30		
-2.00 to 2.00	-300 to 300	-0.25 to 0.25	-50 to 50		
-2.50 to 2.50	-500 to 500	-0.50 to 0.50	-100 to 100		
-3.00 to 3.00 ...	-1,000 to 1,000	-0.75 to 0.75	-175 to 175		
-5.00 to 5.00 ...	-1,250 to 1,250	-1.00 to 1.00	-250 to 250		

OUTPUTS AVAILABLE	
4 to 20 mA	
0 to 5 V	
0 to 10 V	
2 to 10 V	
1 to 5 V	

Switch Setup - Outputs, Ranges, Units/Response

Always follow the Auto-Zero procedure after changing settings.

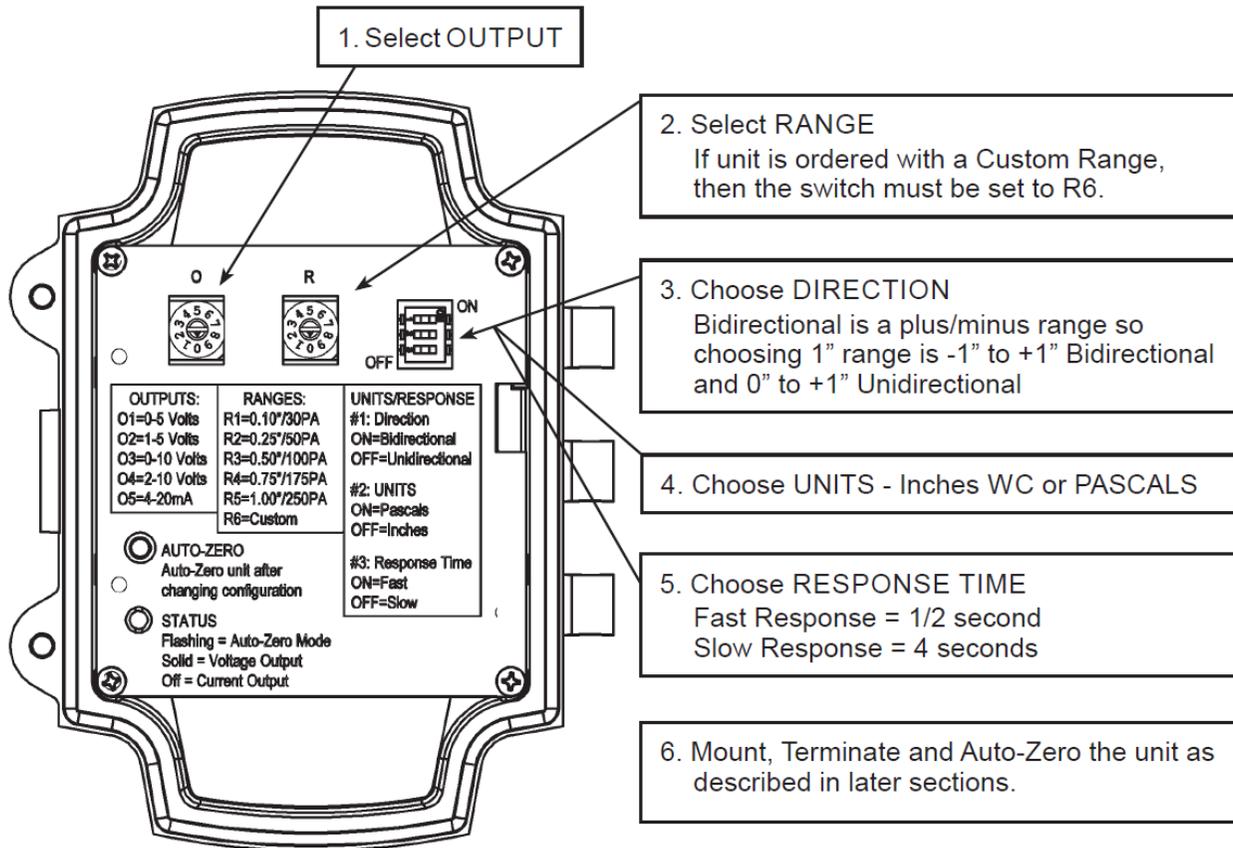

Mounting

1. Attach the unit to its mounting surface with the four self-tapping #10x3/4" sheet metal screws through the holes in the mounting feet. The preferred mounting orientation is with the pressure ports facing down to prevent condensation from entering the pressure transducer. Do not mount to a vibrating surface as vibration may cause issues with the accuracy of the sensing element. See the actual size mounting template for the unit.

The two cover latch screws must be installed to achieve an IP66 rating.

2. After Auto-Zeroing, remove the deadhead tubing and push the system tubing onto the port nipple without creating any kinks or holes.

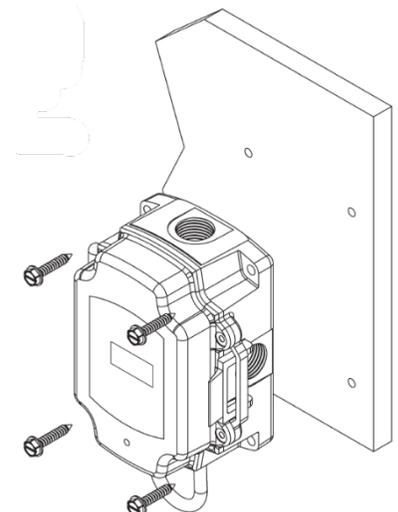


Figure 1: BBox Mounting (for units without Attached Tube option)

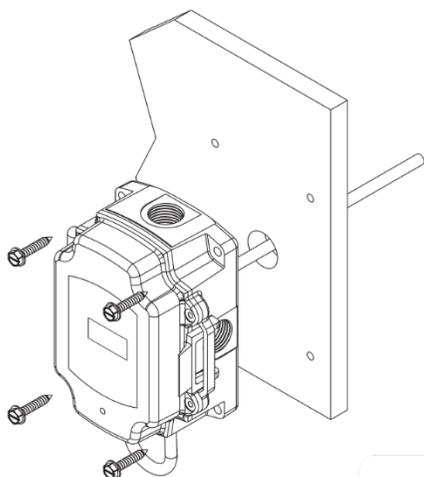


Figure 2: BBox Mounting (for units with Attached Tube option)


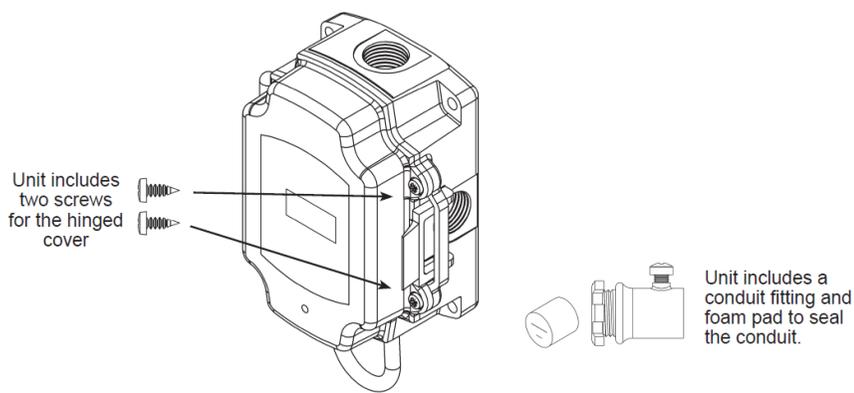


Figure 3: Cover Latch Screws

#47139 - 9/7/23

Mounting Template - Actual Size

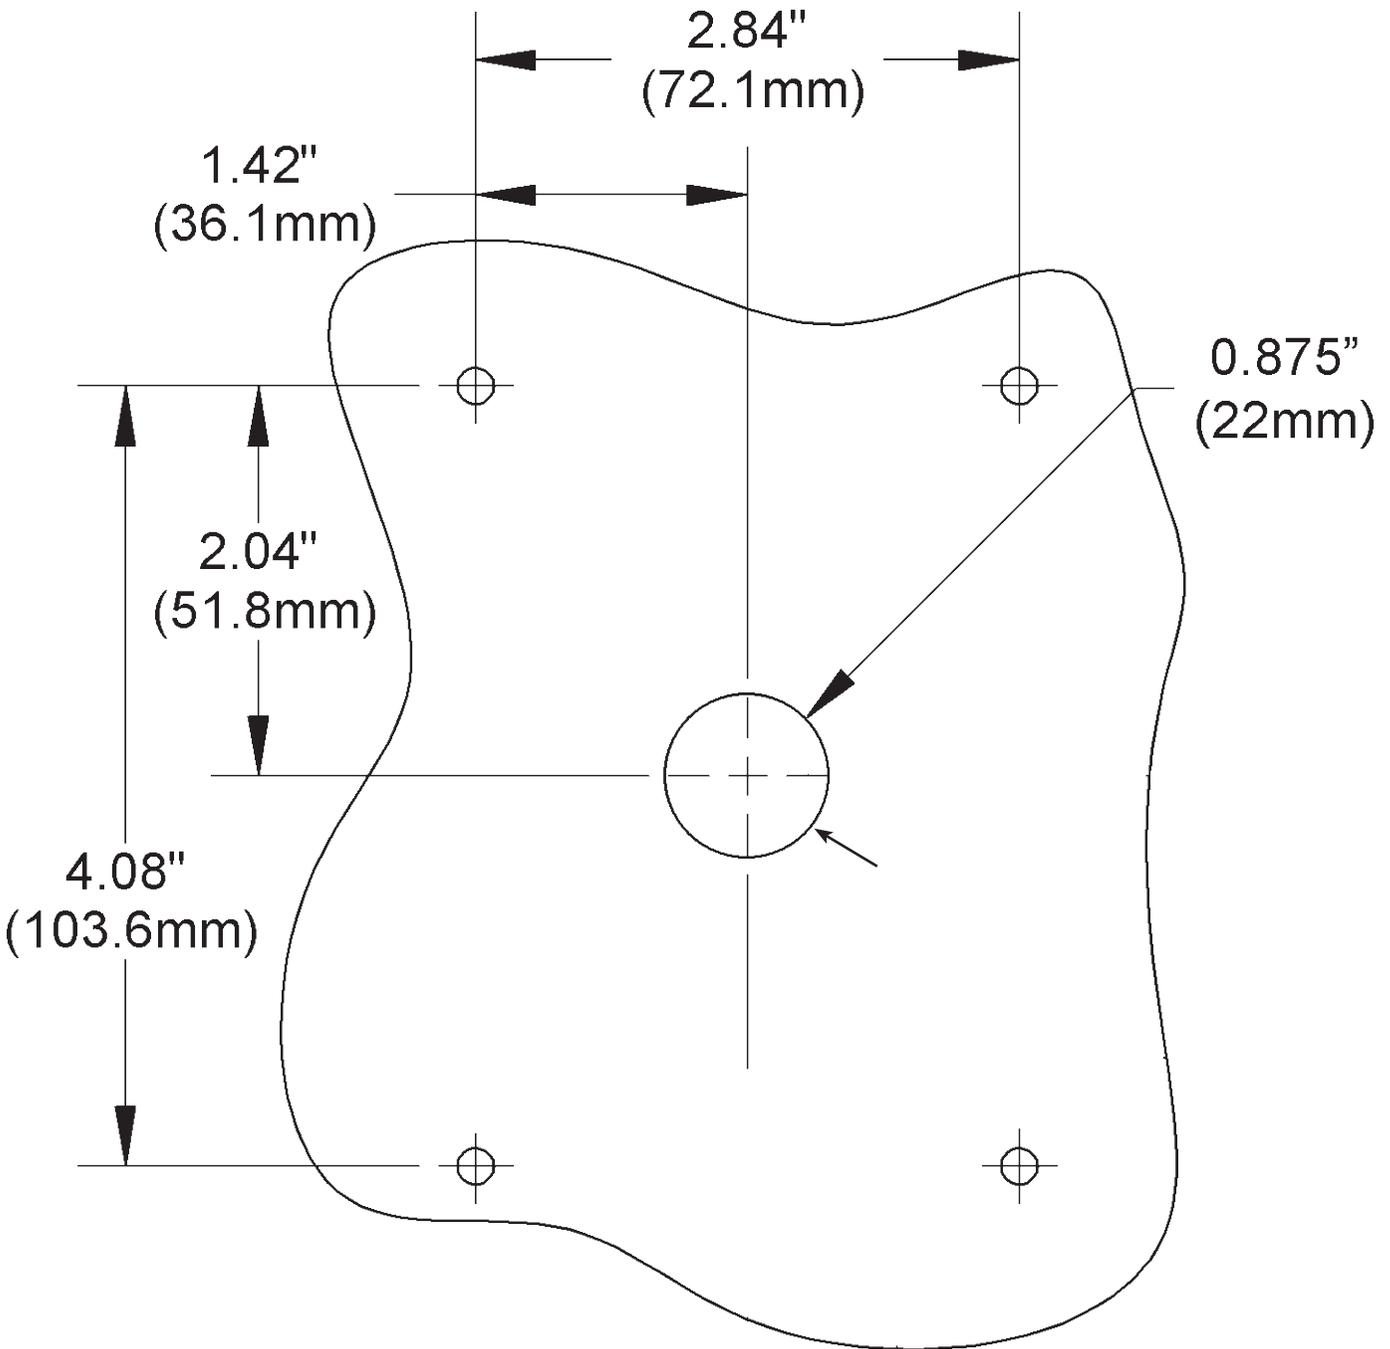

Output Termination

Warning Wire the product with power disconnected. Proper supply voltage, polarity and wiring connections are important to a successful installation. Not observing these recommendations may damage the product and void the warranty.

Tip To ensure that all wires are properly terminated, twist the stripped ends of each wire together before inserting into the terminals. Gently tug on the wire after inserting into the terminal to verify a good connection.

Output Signal	PWR Terminal	GND Terminal	OUT Terminal
4 to 20 mA	7 to 40 VDC	4 to 20 mA Signal To Controller Analog Input	Not Used
0 to 5 or 1 to 5 VDC	7 to 40 VDC or 18 to 32 VAC	To Controller Ground	VDC Signal To Controller Analog Input
0 to 10 or 2 to 10 VDC	13 to 40 VDC or 18 to 32 VAC	To Controller Ground	VDC Signal To Controller Analog Input

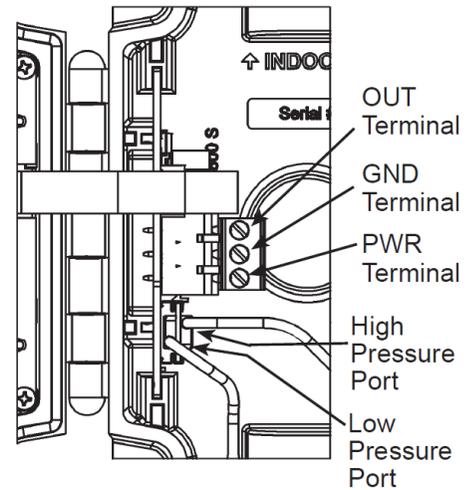


Figure 4: ZPM Wiring Terminals

Auto-Zero Procedure and Status LED Operation

Auto-Zero for Standard Units

Auto-Zeroing must be done after the initial setup, changing mounting orientation or changing any settings. For most applications, perform an auto-zero whenever it appears that the sensor has drifted. For critical applications, the unit should be zeroed 2-3 times a year.

1. Power must be on.
2. Detach system tubing and deadhead ports using the supplied tubing or other short length of tubing. Do not kink tubing.
3. Press and hold the Auto-Zero button for 1-2 seconds. The Status LED will stop flashing when completed.
4. Remove deadhead tubing and reattach system tubing.

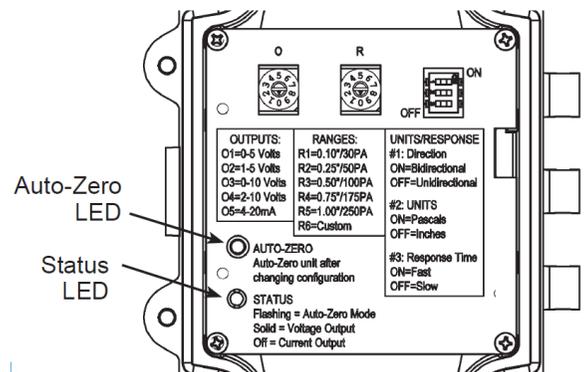


Figure 5: Auto-Zero and Status LEDs

#47139 – 9/7/23

Auto-Zero for Units with Attached Tube

1. Power must be on.
2. Disconnect system tubing from the Low Pressure brass fitting and attach the supplied 6" deadhead tubing to the brass fitting.
3. Disconnect the short clear tubing from the 90° black Attached Tube fitting with your fingers (Fig. 9). A pliers may cut the tubing.
4. Connect the clear tubing to the supplied straight black fitting on the 6" tubing (Fig. 9). Do not kink the tubing.
5. Press and hold the Auto-Zero button for 1-2 seconds. The Status LED will stop flashing when completed.
6. Disconnect the deadhead tubing and reattach the clear tubing and system tubing. Confirm that the clear tubing is pressed all of the way onto the fitting and that it is not kinked.

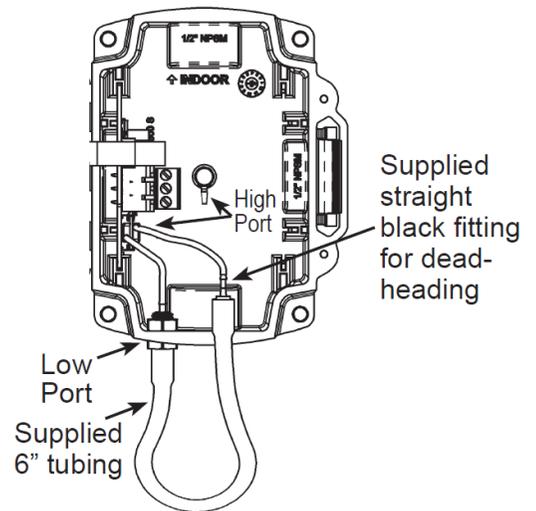


Figure 6: Deadheading ports on units with attached tube

Status LED Operation

LED Off: No power is applied or the unit is in 4 to 20 mA Mode

LED Solid (On): LED is on when power is applied and a VDC output is selected. When 4 to 20 mA output is selected, the light is on for 2 seconds at power up then goes off.

LED Flashing: Auto-Zero. The LED will flash for about 20 seconds.

Typical Applications

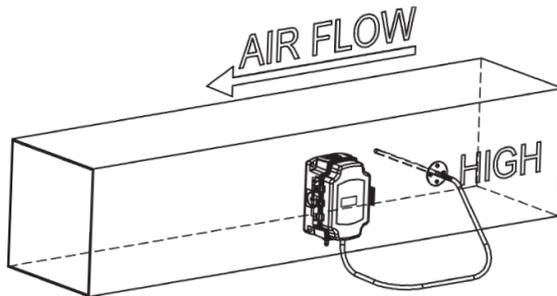


Figure 7: Duct Static Pressure Monitoring (ZPM Pressure Sensor mounted on the duct with a Static Pressure Probe in the duct.)

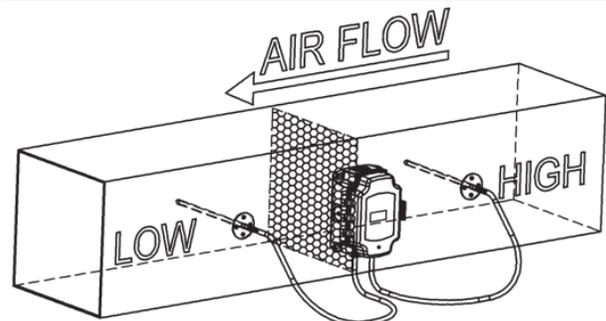


Figure 8: Air Filter Pressure Drop Monitoring (ZPM Pressure Sensor mounted on the duct with a Static Pressure Probe on either side of the filter in a duct.)

 Tip	Form a drip loop in the tubing to prevent condensation from reaching the unit.
---	--

Diagnostics	
POSSIBLE PROBLEMS:	POSSIBLE SOLUTIONS:
Status LED does not light	<ul style="list-style-type: none"> • Check power connections for proper power • Sensor is set to 4 to 20mA output
Status LED is flashing	The unit is performing an auto-zero. Wait 20 seconds and check again.
Output stuck (high or low)	Remove pressure from ports and perform auto-zero procedure
Output not tracking pressure properly	<ul style="list-style-type: none"> • Check rotary switch for proper pressure range selection • Check rotary switch for proper output range selection

Appendix – Symbols Key

 Warning	Potential for death, serious injury, or permanent damage to a system.
 Caution	Potential for injury, damage to a system, or system failure.
 Tip	Useful information not related to injury or system damage.