


Dimensional Drawing

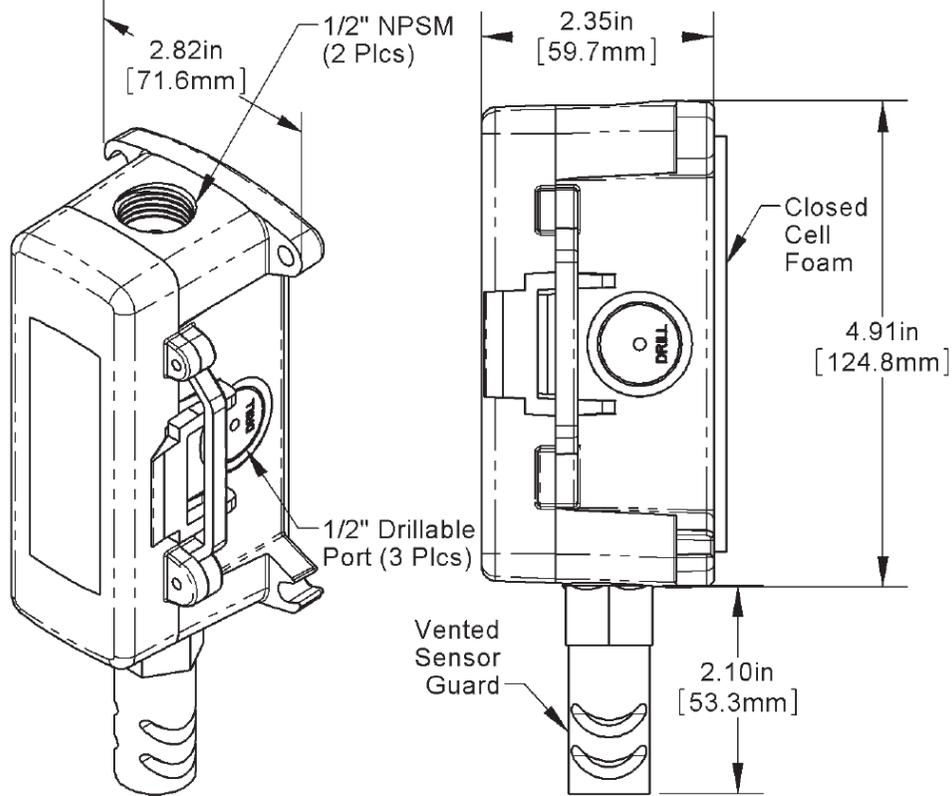


Mounting

Outside Air (OSA) sensor placement is critical to good performance. The OSA sensor must be mounted in the shade away from building windows, doors or vents. They should never be in direct sunlight or you will have higher than expected temperature readings by as much as +30%. The ideal shaded location in the Northern hemisphere is on the North side of the building. In the Southern hemisphere the South side of the building is ideal.

The sensor shield and probe should always point down and mounted between four feet above the ground/roof and one foot minimum below the eave. (Note: Four feet keeps the sensor above the ground or roof top radiation and one foot under the eave prevents measurement of trapped heat from under the eave.)

1. Drill the mounting holes and mount as shown in the figures shown here.
2. Snug up the mounting screws to ensure that the foam backing compresses to about 50% of its thickness to make a gasket type seal against the wall surface.
3. Route the wires into the box and terminate with sealant filled connectors to prevent water from attacking the connection, thereby preventing costly callbacks.

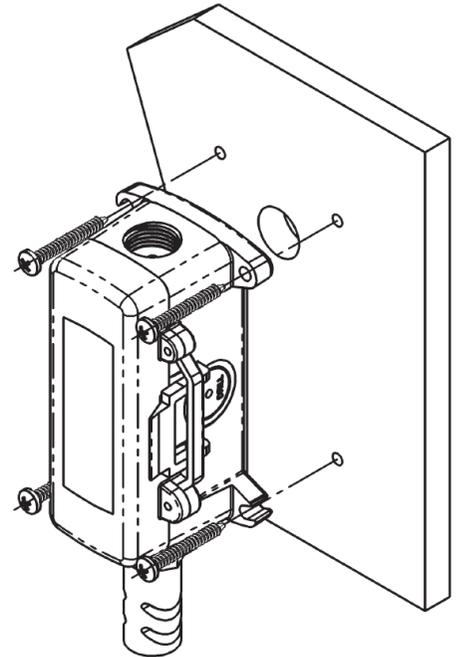

Tip

Caulk the wiring hole after the wiring is installed. Close the cover of the enclosures and secure with provided cover security screws.

Termination



Warning

Wire the product with power disconnected. Proper supply voltage, polarity, and wiring connections are important to a successful installation. Not observing these recommendations may damage the product and will void the warranty.



Caution

- Do NOT run this device’s wiring in the same conduit as AC power wiring of NEC class1 or NEC class 2, NEC class 3 or with wiring used to supply highly inductive loads such as motors, contactors and relays. Tests show that fluctuating and inaccurate signal levels are possible when AC power wiring is present in the same conduit as the signal lines.
- All wiring must comply with the National Electric Code (NEC) and local codes.







Tip

- We recommend using twisted pair of at least 22AWG and sealant filled connectors for all wire connections. Larger gauge wire may be required for long runs.
- Keep transmitter at least 5 feet from any radio wave-emitting device (i.e.: 2 way radio). Transmitters that are less than 5 feet from a radio wave-emitting device can cause unwanted interference.


#20920 – 9/7/23

Typical Configurations

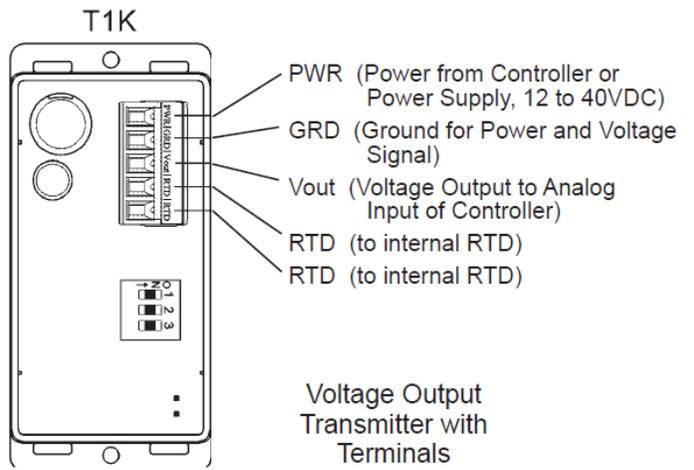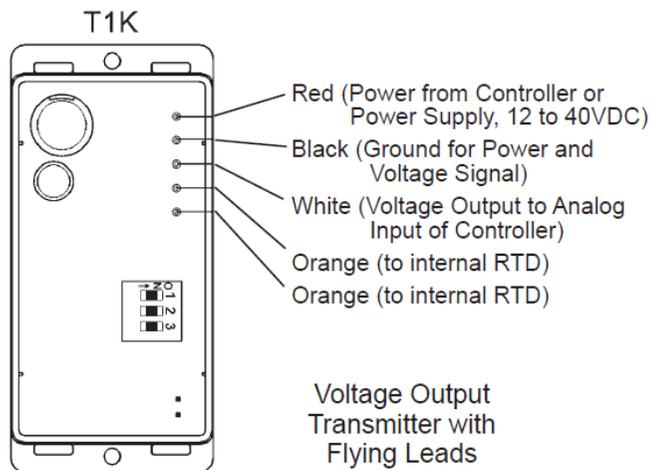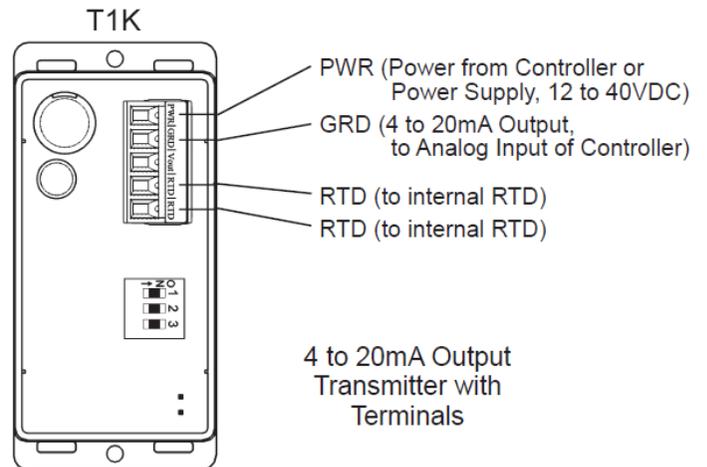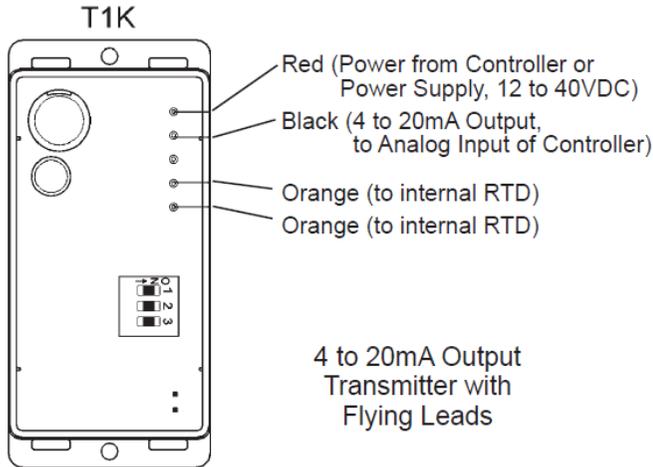


DIP Switch Settings for Field-Selectable Output

The transmitter circuit board has a three-position DIP switch that controls the temperature output value. This switch is set at the factory at the time of the order. The settings of the switch are shown below in case you want to change them in the field. Be aware that the power requirements for the unit change depending on the temperature output value. See the specifications section for power requirements.

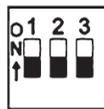


0 to 5V

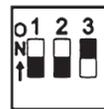


0 to 10V



4 to 20mA

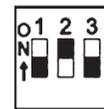

1 to 5V

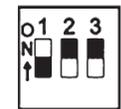

0 to 10V

Diagnostics	
Possible Problems:	Possible Solutions:
Unit will not operate.	<ul style="list-style-type: none"> Measure the power supply voltage by placing a voltmeter across the transmitter's (+) and (-) terminal. Make sure that it matches the drawings above and power requirements in the specifications. Check if the RTD wires are physically open or shorted together and are terminated to the transmitter.
The reading is incorrect in the controller	<ul style="list-style-type: none"> Determine if the input is set up correctly in the controllers and BAS software. For a 4 to 20mA current transmitter measure the transmitter current by placing an ammeter in series with the controller input. The current should read according to the "4 to 20mA Temperature Equation" shown below. For a voltage transmitter, measure the signal with a volt meter (Orange or Orange/ Black to Black). The signal should read according to the "Voltage Temperature Equation" shown below.

Voltage Temperature Equation

$$T = T_{Low} + \frac{(V \times T_{Span})}{V_{Span}}$$

T = Temperature at sensor
 T_{Low} = Low temperature of span
 T_{High} = High temperature of span
 T_{Span} = T_{High} - T_{Low}
 V_{Low} = Low transmitter voltage usually=(0, 1 or 2v)
 V_{High} = High transmitter voltage usually=(5 or 10v)
 V_{Span} = V_{High} - V_{Low}
 V = Signal reading in volts

4 to 20mA Temperature Equation

$$T = T_{Low} + \frac{(A - 4) \times (T_{Span})}{16}$$

T = Temperature at sensor
 T_{Low} = Low temperature of span
 T_{High} = High temperature of span
 T_{Span} = T_{High} - T_{Low}
 A = Signal reading in mA

Appendix – Symbols Key

 Warning	Potential for death, serious injury, or permanent damage to a system.
 Caution	Potential for injury, damage to a system, or system failure.
 Tip	Useful information not related to injury or system damage.